




EN TWIN PULL

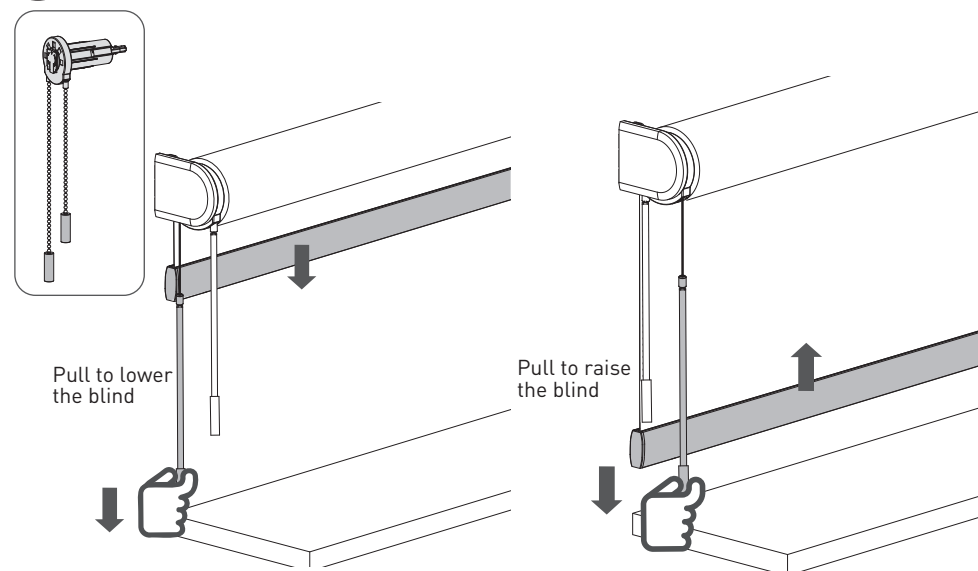





NO TVILLING TREKK

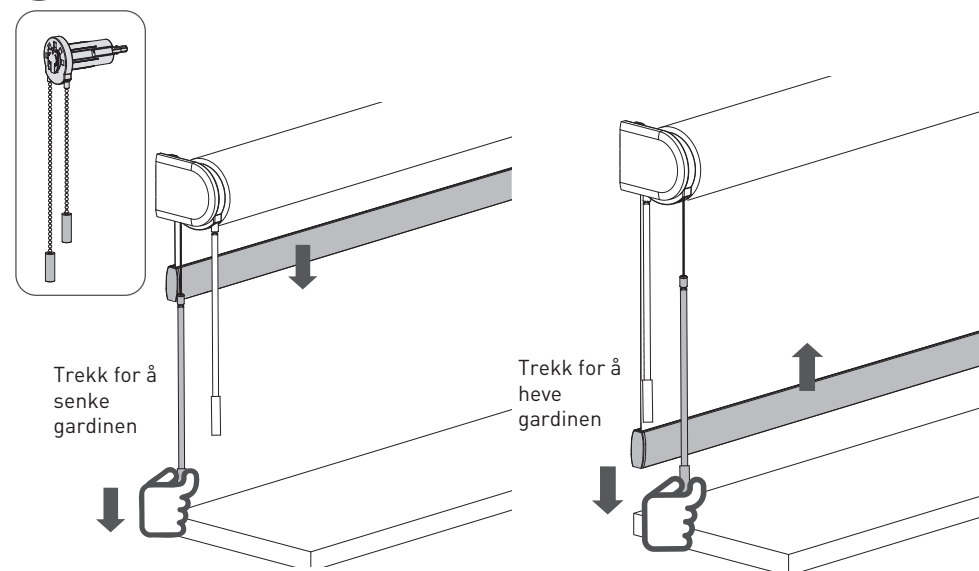





SE TWIN PULL

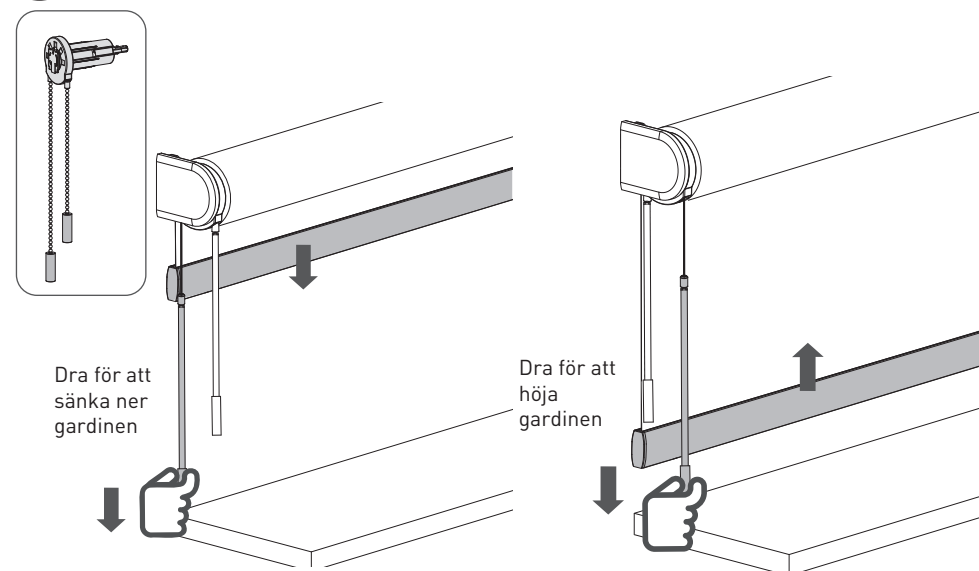





SPRING



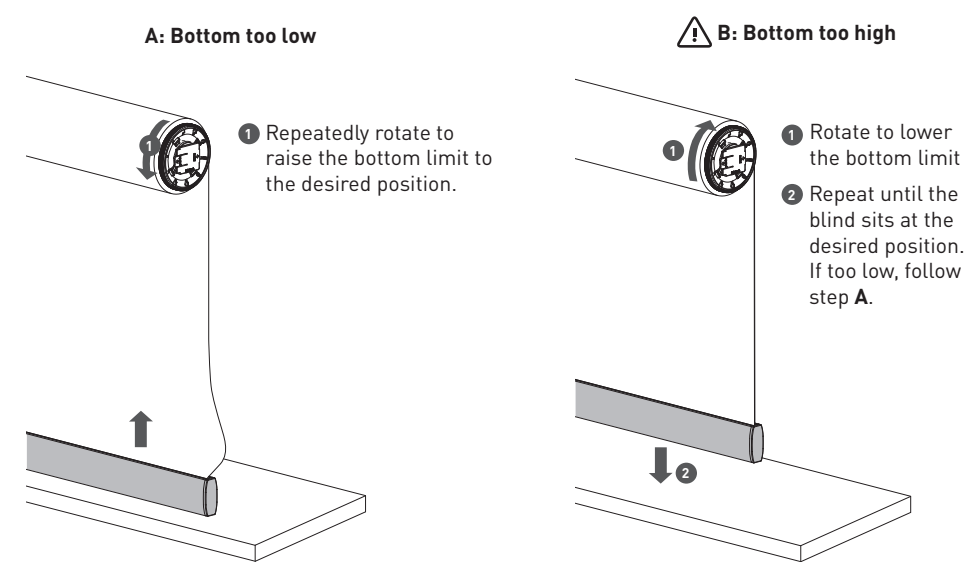
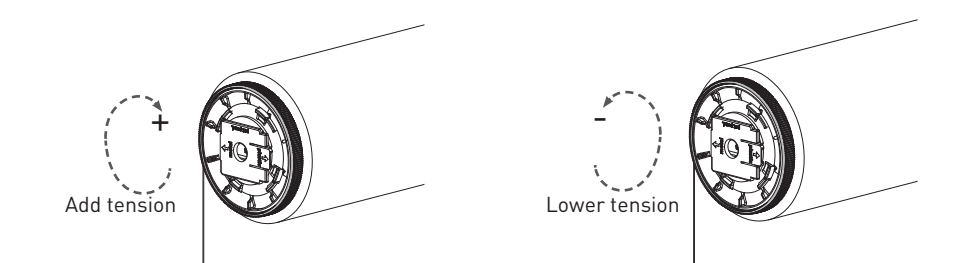
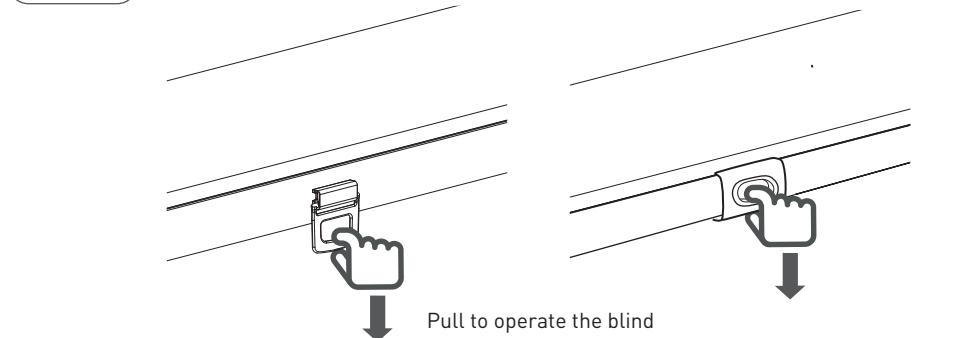
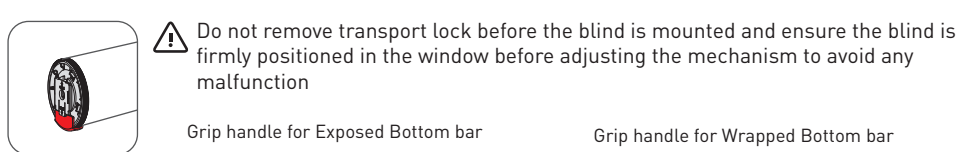


FJÆRTREKK

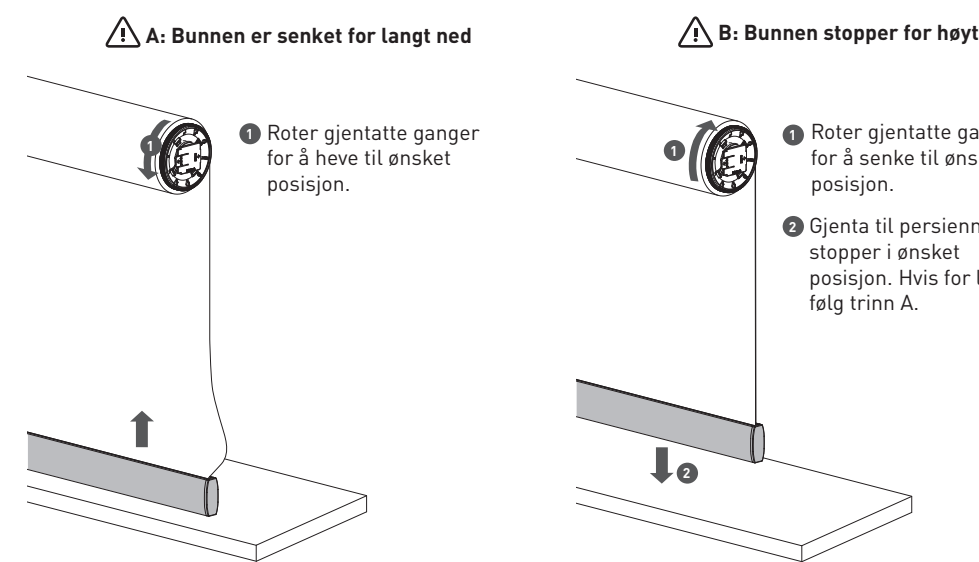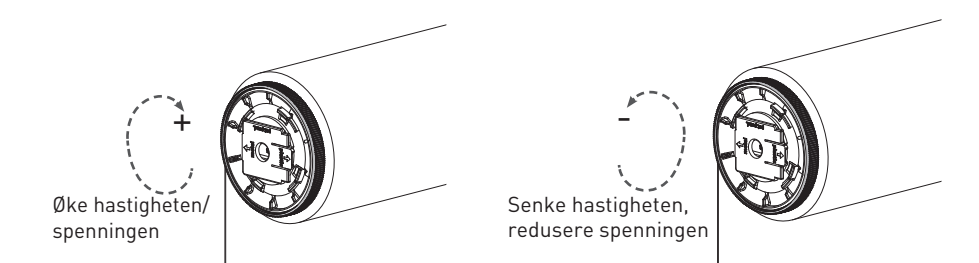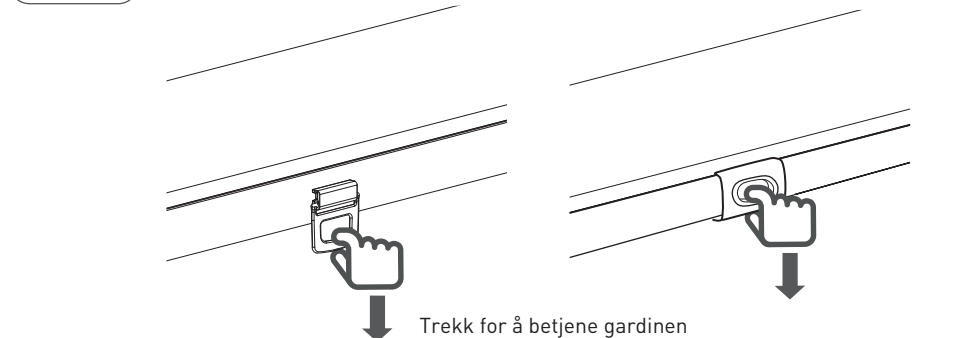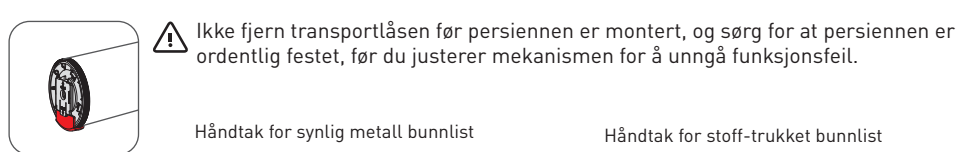


FJÄDER

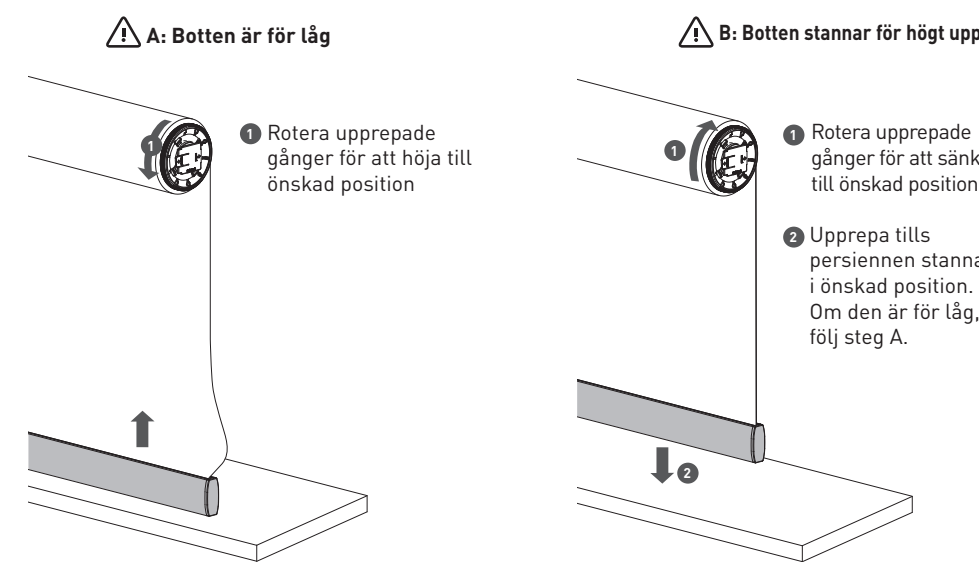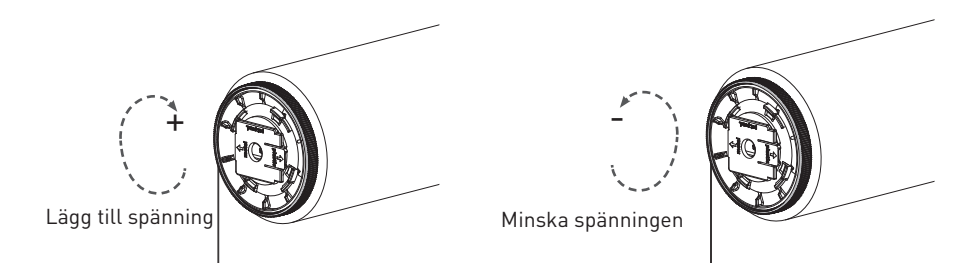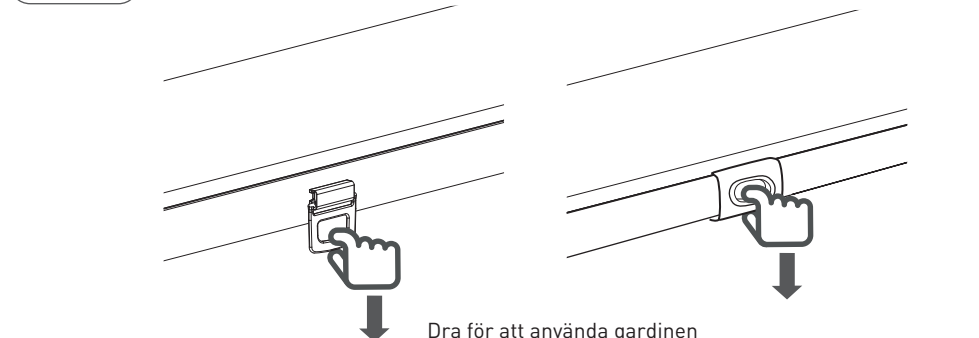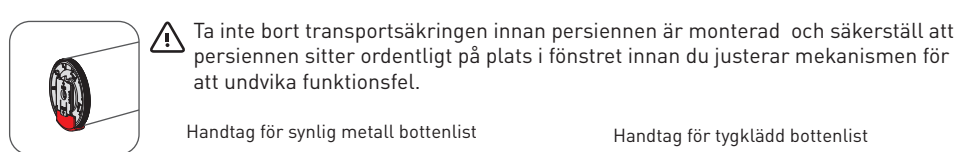

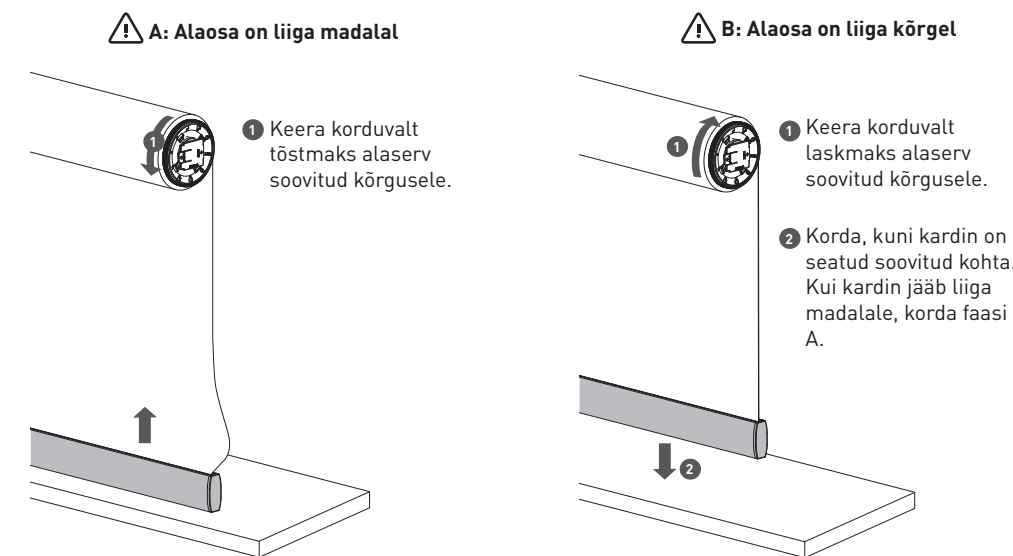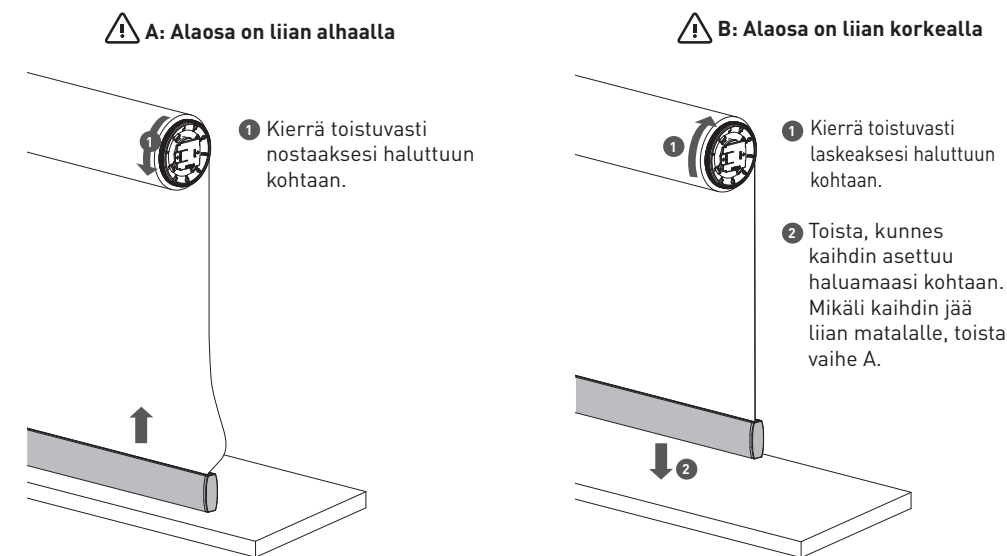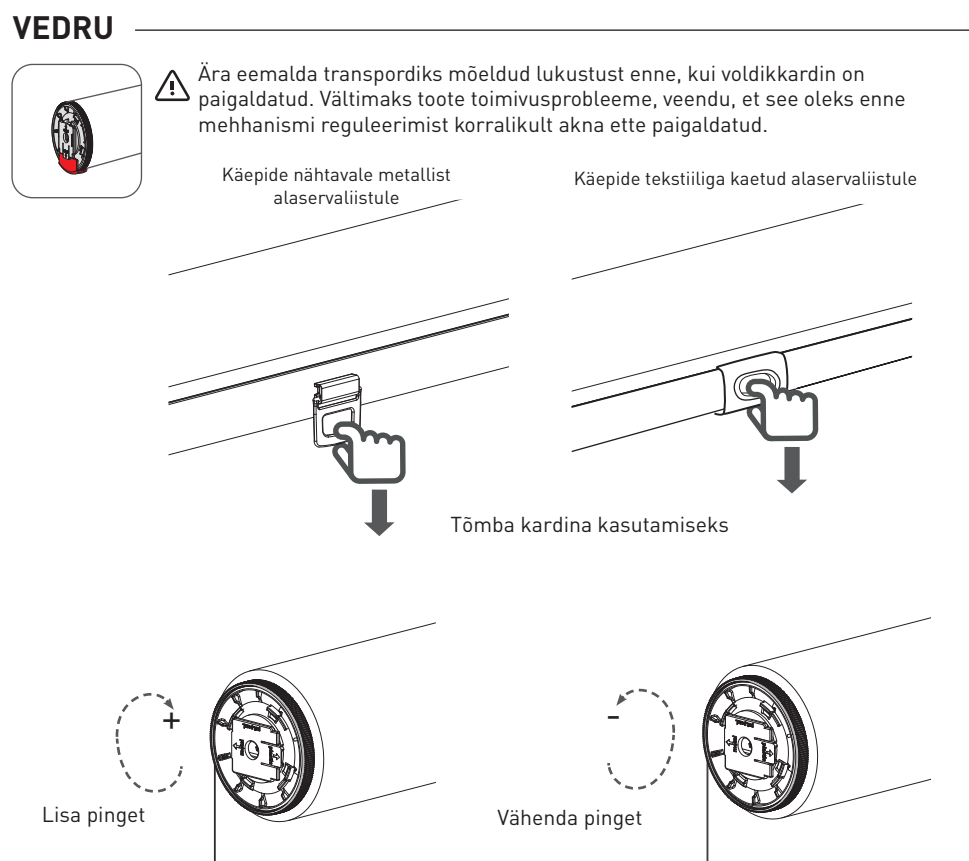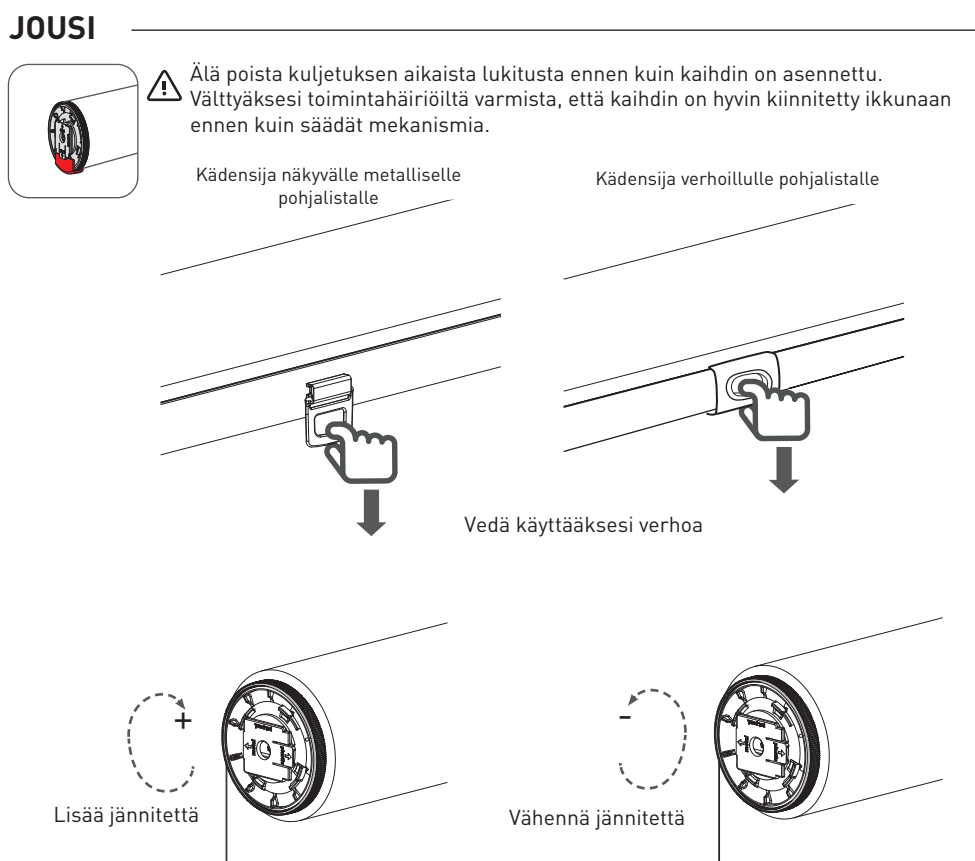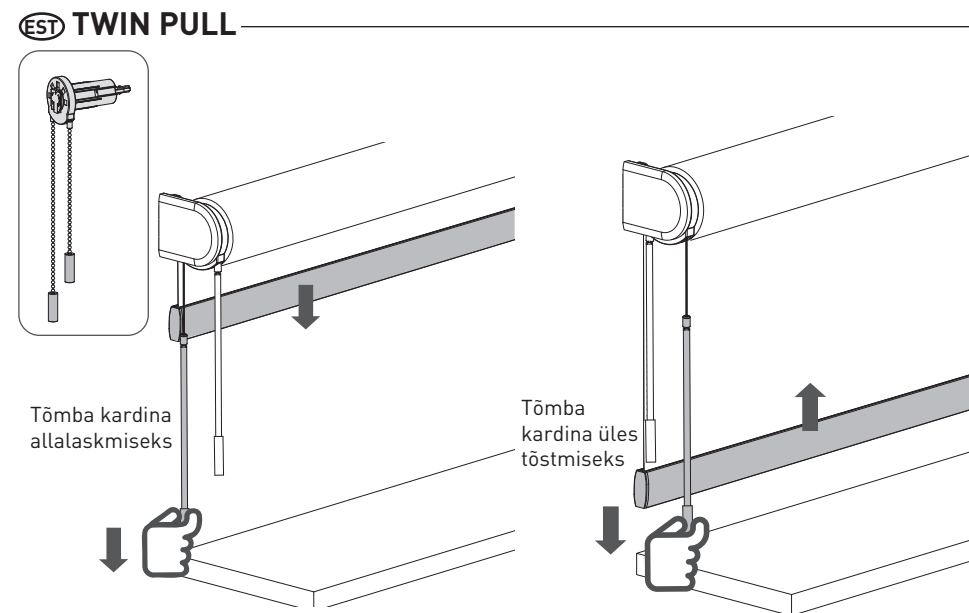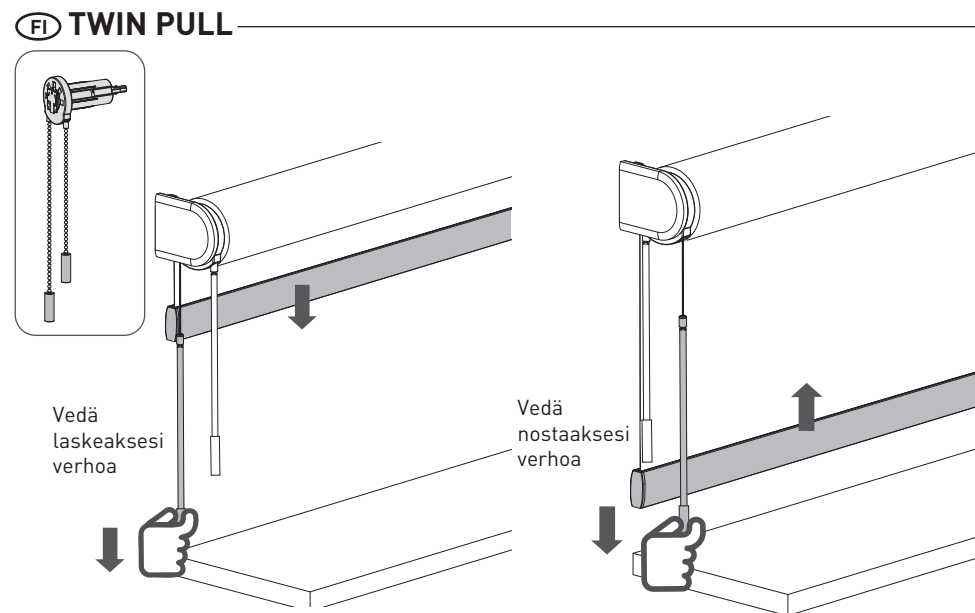

DEKOSOL®

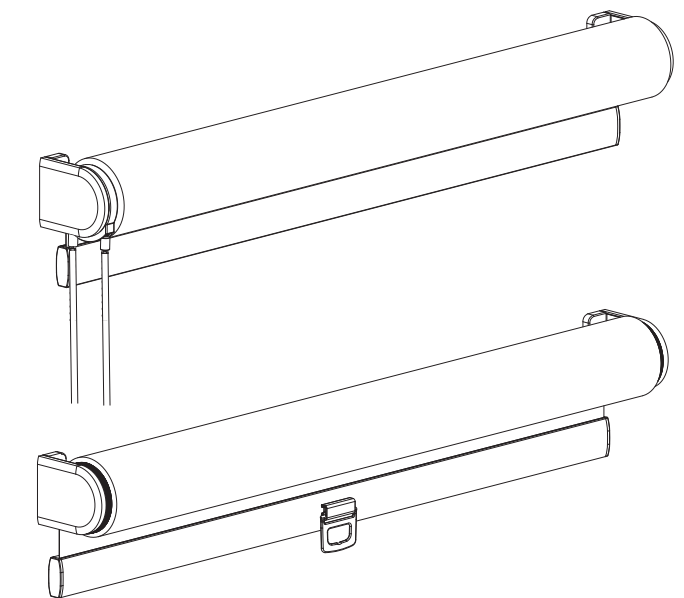

User Guide

Bruksanvisning

Bruksanvisning

Käyttöohje

Kasutusjuhend